


- 1) Placca rettangolare 2 posti
- 2) Tasti per azionamento pulsante
- 3) Viti per fissaggio del pulsante sul supporto metallico
- 4) Pulsante Rubi KNX (modularità 60 x 60 mm)
- 5) Supporto metallico (compreso nella fornitura del pulsante)
- 6) Scatola da incasso (non di fornitura Vivo)
- 7) Cornice doppia
- 8) Adattatore doppio (compreso nella fornitura della cornice)
- 9) Supporto metallico (non di fornitura Vivo)
- 10) Viti per fissaggio su scatola da incasso
- 11) Componente di serie civile (non di fornitura Vivo)

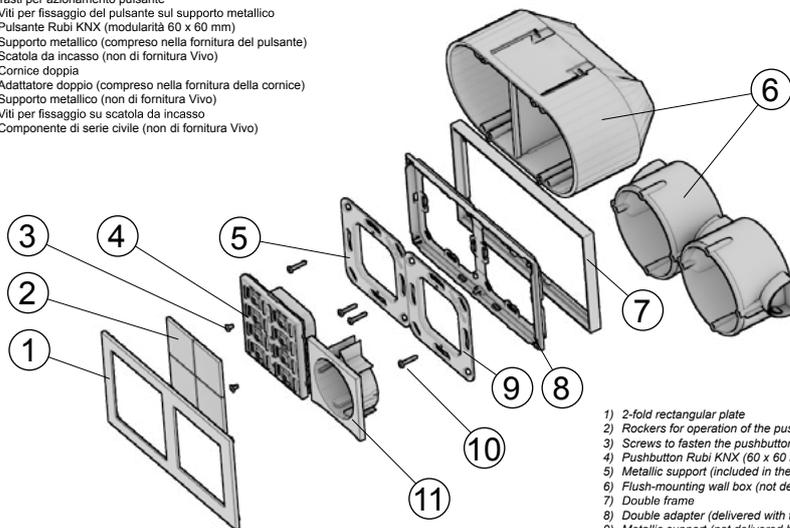


- 1) 2-fold rectangular plate
- 2) Rockers for operation of the pushbutton
- 3) Screws to fasten the pushbutton on the support
- 4) Pushbutton Rubi KNX (60 x 60 mm modularity)
- 5) Metallic support (included in the delivery of the pushbutton)
- 6) Flush-mounting wall box (not delivered by Vivo)
- 7) Double frame
- 8) Double adapter (delivered with the frame)
- 9) Metallic support (not delivered by Vivo)
- 10) Screws for fasten on the wall box
- 11) Flush-mounting insert (not delivered by Vivo)

Cornici / Frames - Fortio Rubi

Codice:K.FOR.xxx.xxx.WO

Code:K.FOR.xxx.xxx.WO

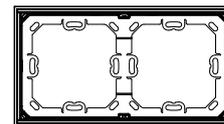

Montaggio

Si consiglia di montare la cornice prima dei tasti. Rimuove le viti per il fissaggio sul supporto metallico (solo per pulsanti). Sfilare l'apparecchio dal supporto aiutandosi con una leggera rotazione. Se necessario, scollegare l'apparecchio dal bus KNX. La cornice deve essere montata dal lato posteriore dell'apparecchio, facendo scattare i quattro dentini nelle sedi predisposte sull'apparecchio. Collegare nuovamente l'apparecchio e inserirlo nel supporto fino a sentire lo scatto. Serrare le viti per il fissaggio sul supporto (solo per pulsanti).

Mounting

It is recommended mounting the frame before the rockers. Remove the screws for mounting on the metallic support (only for pushbuttons). Remove the device from the support with the help of a slight rotation. If necessary, disconnect the device from the KNX bus. The frame has to be mounted from the back of the device, snapping the four teeth into the appropriate seats of the device. Reconnect the device and insert it into the support until hearing a click. Tighten the fixing screws on the support (only for pushbuttons).



Avvertenza! Nel montaggio della cornice esercitare la pressione sul corpo dell'apparecchio e non sulla cornice.



Warning! When mounting the frame be careful to press on the device and not on the frame.